



AUTHOR IGLA-EN

User manual




AUTHOR

1. QUICK START

- [About the device](#)
 - [Operability check](#)
 - [Personal owner card](#)
 - [Definitions](#)
 - [Service indication](#)
 - [Service button](#)
 - [Authorization](#)
 - [Authorization PIN code](#)
 - [Important information and warnings](#)
-

About the device

AUTHOR IGLA is a unique digital system designed to protect your car against theft or carjacking. Its innovative feature is a technology that blocks the engine via standard electric circuits.

 This manual covers the following device versions:

- AUTHOR IGLA 2C2L KIT: AR 20 + 2xKEYFOB
- AUTHOR IGLA KIT: AR 20 (former IGLA 220)
- AUTHOR IGLA KIT: 2xKEYFOB (former IGLA 231)
- AUTHOR IGLA KIT: AR 20 + 2xKEYFOB (former IGLA 251)



On this page, you will find a brief manual to help you get to know the device better and start using it.

Operability check

Once your car is back from an installation center, follow the steps below:

- Check system's operability (including engine blocking, [arming and disarming](#), [the service button](#), and [service features](#)).
- [Change the initial PIN code](#).
- Ask where exactly the system has been installed in your car.

Personal owner card

The personal owner card, which is part of the complete set, contains secret codes that allow to manage the system. Each code is unique and specific to a particular system, which provides a strong security level and prevents any unauthorized access.



- **Card number**—a personal owner card number that helps you check if the card matches the system. Technical Support may request it if necessary.

- **Device number**—a unique identification number of the system. Technical Support may request it from time to time.
- **Emergency code**—a secret code under the protective layer designed for emergency authorization, changing of the current PIN code, and for switching into the Transport mode.
- **Bluetooth pairing code**—a secret code under the protective layer. It helps you pair your smartphone with the system to use it as a keyfob.

Definitions

Service indication

Indication notifies you of disabled engine blocking and any changes in system's settings. Indication is produced via standard symbols on the dashboard. The system can also produce an analog service indication via an optional LED or buzzer.

Service button

It is the car's standard control located in the passenger compartment that helps you enter the PIN code, switch into the Service mode, and change the device's settings.

Authorization

This algorithm is designed to disable engine blocking.

Authorization PIN code

PIN code is a combination of keystrokes produced with the car's standard buttons in the passenger compartment. The initial PIN code is set when installing the system.

Important information and warnings

- Fill out the [warranty card](#) after equipment has been installed. Without it, the warranty is not valid.
- The manufacturer cannot be held liable for equipment malfunctions caused by improper connection, installation or use contrary to recommendations.

- The manufacturer reserves the right, without prior notice to the user, to introduce changes to the product design to improve its operation and technical specifications.
- Equipment is designed for cars with the **on-board voltage of 12V**. For more details, please contact official dealerships, certified installation centers, or AUTHOR's Technical Support.
- **Equipment** must be installed as per wiring notes and manuals at official dealerships or certified installation centers.
- These features may vary depending on the car's brand, model, equipment, and year of manufacture. For more details, please contact official dealerships, certified installation centers, or AUTHOR's Technical Support.
- **Do not keep** your personal owner card and this manual inside the car.
- **Save information** indicated in your personal owner card in any convenient way. The card is made in a single copy and cannot be recovered.
- **Do not disclose** the PIN code and information from the personal owner card to third parties.
- **Do not keep** authorization keyfobs together with the car's standard keyfob.
- **Do not keep** the keyfob inside the car when your trip is over because anti-theft features will be disabled.
- [Verify](#) that the number of the personal owner card matches the installed equipment.